OPERATION AND MAINTENANCE GUIDES



| O&M For: | XP1025000 |
|----------------------|---|
| Date: | November 2023 |
| Code: | XP1025000 |
| Description: | XPRESS Water Tank 25,000 Ltr - North Island |
| Product Warranty: | 20 years |

| CI | ᇛ | \sim 1 | Εī | $\sim ^{\wedge}$ | ŒΠ | 10 | ıc |
|----------|---|----------|----|------------------|----|-----------|----|
| ગ | | СI | ГΙ | CF | чн | Or | 13 |

| Capacity (L) | Diameter (mm) | Height (mm) | Weight (kg) | Manhole Dia (mm) |
|--------------|---------------|-------------|-------------|------------------|
| 25,000 | 3700 | 2820 | 380 | 610 |

Includes 1x 50mm Outlets.

Complies with:

Standard

- AS/NZS 4020: Products in contact with drinking water
- AS/NZS 2070 (INT): Plastics material for food contact use
- Certified to AS/NZS 4766:2006 Water & Chemical Tank Standard

Uses

- Potable Water Storage
- Retention/Detention Stormwater Management

Statement

In line with today's focus on Ecologically Sustained Development, Green Building Initiatives and 5 Star Ratings, Promax is committed to supplying quality Liquid Storage and Handling Solutions.

Promax Plastics confirms that if these tanks are installed according to Good Management practices set out in the Promax Installation Guides, they will perform as stated throughout their intended life.

MAINTENANCE

| Description | Action | Frequency |
|----------------------|--|-----------------------------|
| Tank Stability | Tank must remain level, foundation must not become eroded | Monthly |
| Tank Lid | Remains securely fitted | Bi-Monthly |
| Inlet/Outlet Fitting | Remains securely fitted with no leakage | Bi-Monthly |
| Pump | Check Pump, if fitted, for inlet screen blockages | Half yearly or as necessary |
| Sediment Build Up | Remains lower than base outlet - if outlet flow becomes restricted remove sediment with vacuum truck. Re-attach tank lid securely. | Half yearly or as necessary |

Please note: Entry into this tank is at owners risk.



Promax Engineered Plastics Limited PO Box 749, Kerikeri 0245, New Zealand T: 0800 77 66 29 E: sales@promax.co.nz



OPERATION AND MAINTENANCE GUIDES



Responsibility: The owner/s are responsible for maintenance of the tank.

Post Storm Inspection: Following a storm event it is recommended that a full tank inspection is carried out, please refer

the maintenance section for guidelines on this.

Debris removal programme:

If debris is identified in either a regular maintenance check or post storm inspection it is recommended that this is removed by a professional stormwater maintenance provider.

MAINTENANCE RECORDS

| Date | Comments | Completed |
|------|----------|-----------|
| | | |
| | | |
| | | |
| | | |
| | | |
| | | |
| | | |
| | | |
| | | |
| | | |
| | | |
| | | |
| | | |
| | | |
| | | |
| | | |
| | | |
| | | |
| | | |
| | | |
| | | |
| | | |
| | | |
| | | |
| | | |