
Installation Guide Promax Fire Kits




Promax Fire Coupling Kit

Product code: PMXAC00100

Note: Thread sealant or thread tape must be used on all threads.

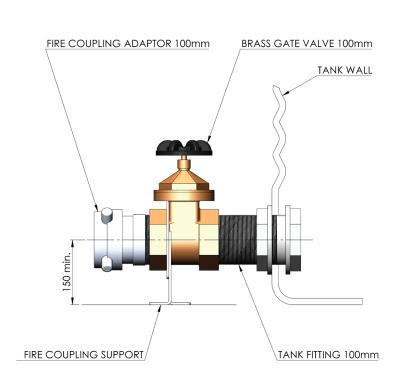

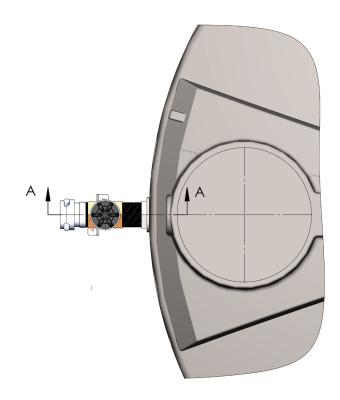

SECTION A-A SCALE 1:5