
Promax Pump Cover Fitting Instructions

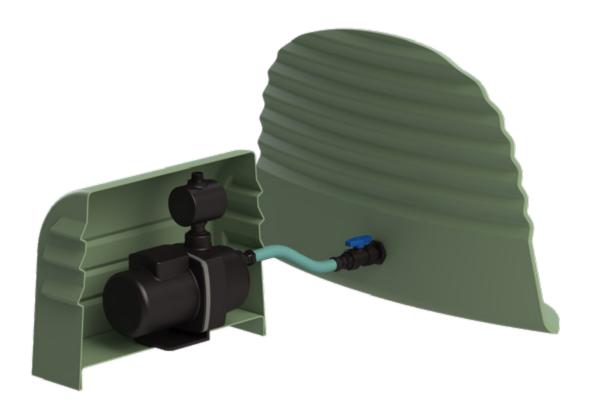

Thank you for purchasing a Promax Pump Cover



Below are instructions for the most common way to install your Promax Pump Cover.

- 1. Flip the plastic base tray upside-down and fit with concrete OR cut a piece of timber to fit inside the tray.
- 2. Once the concrete is dry, turn the tray over and bolt the pump into position on the tray.
- 3. Cut the cover to suit your fittings and then screw the cover to the tray.



