

Sump Pumps



D42A/B

D53A/B

Model Numbers:
D42A/B, D53A/B



HIGH PRESSURE SUBMERSIBLE DRAINAGE PUMPS

APPLICATION

Ideal for non-potable rainwater applications, lawn and garden irrigation, sump emptying to higher heads, treated effluent disposal and water transfer from wells.

FEATURES & BENEFITS

Davey Sump Pumps are used to remove water that has accumulated in a sump or pit, as well as emptying swimming pools and removing flood water from buildings etc.

Davey Sump Pumps are used where there is flooding and to solve water entry in basements where the water table is above the foundation.

Double mechanical seal, one in oil bath on motor and extra mechanical seal on pump

- Superior reliability
- Long service life

Corrosion resistant 304 stainless steel shaft, motor shell and fasteners

- Long service life

Cast 316 stainless steel motor caps and super tough engineered thermo plastic pump casing

- Outstanding corrosion resistance
- Long life

Centrifugal multistage 2 and 3 impeller designs

- Higher pressures and increased efficiency

Closed vane impellers with long engagement "D" drives

- Positive operation
- Long service life

Patented independently floating neck rings

- Outstanding pump performance
- Long pump life

Corrosion resistant hard wearing polycarbonate impellers

- Long service life

Corrosion resistant stainless steel fine mesh suction strainer with large surface area

- Prevents blockages of the pump by solids

In-built automatic thermal overload

- Protects the motor in the event of blockage or voltage supply problems

HO7RNF oil resistant leads, 10 metres long with 3 pin power plug

- Easy to connect to power supply
- Longer life in dirty water

Sump Pumps

OPERATING LIMITS

Model	D42A/B	D53A/B
Capacities to	120 lpm	130 lpm
Maximum total head	32m	45m
Maximum submergence	12m	
Maximum pumped water temperature	40°C	
Maximum soft solids	1.9mm O.D.	
Outlet size (BSP)	1" F	

SUITABLE FLUIDS

Clean water of neutral pH containing up to 1% small solids. Some wear should be expected while pumping hard solids in suspension.


MATERIALS OF CONSTRUCTION

PART	MATERIAL
Impeller	Glass filled polycarbonate
Lock nut	304 stainless steel
Pump casing	Glass filled polycarbonate
Diffuser and blanking ring	Glass filled noryl
Mechanical seal – pump	Carbon / ceramic
Mechanical seal – motor	Silicon carbide / ceramic oil in bath
Shaft seal elastomer	Nitrile rubber
Pump shaft	304 stainless steel
O-rings	Nitrile rubber
Motor shell	304 stainless steel
Bottom bearing housing	Cast 316 stainless steel
Upper motor cover	Cast 316 stainless steel
Handle	304 stainless steel
Fasteners	304 stainless steel
Float and power supply leads	HO7RN-F oil resistant

ELECTRICAL DATA


Model	D42A/B	D53A/B
Supply voltage	220-240V	
Supply frequency	50Hz single phase	
Speed	2 pole, 2850rpm	
Full load current (Run)	4.3A	5.7A
Locked rotor current (Start)	14A	
Input power (P ₁)	1.00kW	1.31kW
Output power (P ₂)	0.60kW	0.84kW
IP rating	X8	
Insulation class	Class F	
Starting	P.S.C.	
Lead	10m long	

HYDRAULIC PERFORMANCE

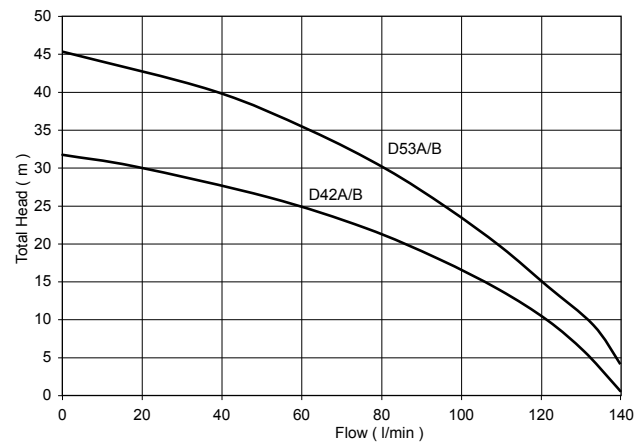

DIMENSIONS (mm)

Model	A	B	C	D	E	F	Outlet B.S.P.	Net Weight (kg)
D42A/B	475	130	370	235	195	330	1" F	10.8
D53A/B	535	170	430	235	195	330	1" F	16.5

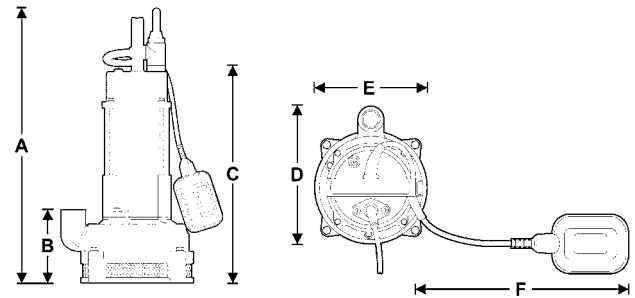

INSTALLATION AND PRIMING

Use a rope to position and retrieve the pump. Do not lower or retrieve the pump using the power lead as this may damage the cable entry seals, causing water leaks and unsafe operation.

Do not use this product for recirculating or filtering swimming pools, spas, etc. While these pumps are built to high safety standards, they are not approved for installations where people will be in the water while they are operating.

Do not pump abrasive materials. Sand and grit in the water being pumped will accelerate wear, causing shortened pump life.

Keep your pump clean, particularly in situations where lint, hair or fibrous materials may get bound around the pump shaft. Regular inspection and cleaning will extend pump life.

Make room for the float switch to operate. Automatic models have a float switch to turn them on when the water level rises and turn them off again when it has been pumped down to the safe operating level of the pump. If the float switch is not free to rise and fall, correct pump operation may not be possible.

Do not run your pump dry. Non-automatic models must be switched off manually or by way of an external float/level switch when the water level is reduced to the top of the pump housing.